
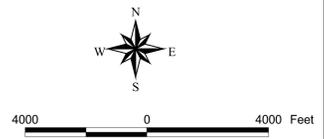


**San Fernando Groundwater Basin  
Production Wells and TCE Plume**

- LEGEND**
- Tujunga Wellfield
  - Rinaldi - Toluca Wellfield
  - North Hollywood Wellfield
  - North Hollywood OU Extraction Well
  - North Hollywood Pump Station
  - Erwin Wellfield
  - Whitnall Wellfield
  - Verdugo Wellfield
  - Burbank OU Extraction Well
  - Burbank OU (Lockheed) Extraction Well
  - Glendale South OU Extraction Well
  - Glendale North OU Extraction Well
  - Pollock Wellfield
  - Spreading Grounds
  - Landfill
  - City Boundary

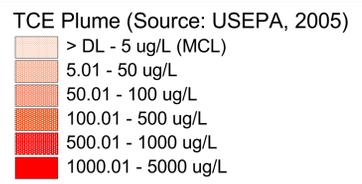

Prepared by John Dobbins on 5/10/09. File name: V:\GIS\PROD\CT\SDRI Map\_VWell Fields\_Spreading Areas\_TCE & PCE\050909\_top\_0\_0\_0.apr