


**San Fernando Groundwater Basin
Production Wells and Nitrate (as NO₃) Plume**

LEGEND

- | | |
|--|--|
| <ul style="list-style-type: none"> Tujunga Wellfield Rinaldi - Toluca Wellfield North Hollywood Wellfield North Hollywood OU Extraction Well North Hollywood Pump Station Erwin Wellfield Whitnall Wellfield Verdugo Wellfield | <ul style="list-style-type: none"> Burbank OU Extraction Well Burbank OU (Lockheed) Extraction Well Glendale South OU Extraction Well Glendale North OU Extraction Well Pollock Wellfield Spreading Grounds Landfill City Boundary |
|--|--|

Nitrate (as NO₃) Plume (Source: USEPA, 2007)
 25.01 - 50 ug/L

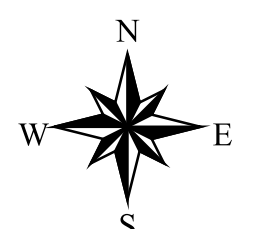

4000 0 4000 Feet



Prepared by John Dobbins on 5/10/09. File name: V:\GIS\PROD\CT\SDR1 Map_VWell Fields_Spreading Areas_TCE & PCE\SDR1_Nitrate_03_09.apr