


**LEGEND**

- Tujunga Wellfield
- Rinaldi - Toluca Wellfield
- North Hollywood Wellfield
- North Hollywood OU Extraction Well
- North Hollywood Pump Station
- Erwin Wellfield
- Whitnall Wellfield
- Verdugo Wellfield
- Burbank OU Extraction Well
- Burbank OU (Lockheed) Extraction Well
- Glendale South OU Extraction Well
- Glendale North OU Extraction Well
- Pollock Wellfield
- Spreading Grounds
- Landfill
- City Boundary

**San Fernando Groundwater Basin  
Production Wells and PCE Plume**

- PCE Plume (Source: USEPA, 2005)
- > DL - 5 ug/L (MCL)
  - 5.01 - 50 ug/L
  - 50.01 - 100 ug/L
  - 100.01 - 500 ug/L
  - 500.01 - 1000 ug/L
  - 1000.01 - 5000 ug/L

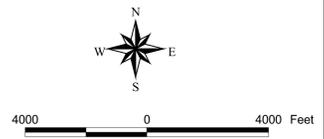

Prepared by John Dobbins/MapInfo on 5/10/05. File name: V:\GIS\PROD\CT\125811 Map\_VWell Fields\_Spreading Areas\_TCE & PCE\050505\_PCE\_5\_7\_05.mxd